



All Seasons Pools & Spas

3201 Kaliste Saloom Rd.

Lafayette, LA 70508

Phone: 337.983.0025

Fax: 337.983.0338

www.allseasonspools.net

How to Prime an In Ground Pool

1. First check the water level in the skimmer. It should be half to three quarters of the way up to the top skimmer on the inside of the pool. If not fill the pool up. Be sure that when the pump is on, the door at the front of the skimmer goes down and is not stuck up.
2. Put your water hose in the lint pot (it is in front of the pump with the clear lid) and fill it up. Make sure the o'ring on the lid is lubricated with Lube Tube. Replace the lid and tighten hand tight.
3. Turn pump on.
4. Watch through the clear lid to see if you can see water coming in from the pool. At first it may be a trickle, but should be more and more until it catches up and fills the lint pot. May need to try this several times.
5. If this doesn't work repeat step 2 & 3 and also check the clear lid for any hairline cracks. Lube o'ring on the lid. If the lid is sucking air, it may not prime.

When in Doubt call us! [337-983-0025!](tel:337-983-0025)